



Part Number SUM-800600GM

Speedometer Sending Unit

Instructions


* **Disconnect the battery *before* attempting any electrical work on your vehicle.** *

WIRING INSTRUCTIONS

Ground - **Black** Wire directly to the engine block or chassis ground.

Power - **Red** Wire to the +12V source.

Speedometer - **White** Connect to the speedometer gauge. In order to isolate the signal wire from electrical noise interference, we recommend that you use a shielded cable to connect the speedometer to the sensor. Be sure to run the cable as far away as possible from the ignition system and any power wires to electric fuel pumps, motors, blowers, etc., particularly spark plug wires. For best results, we also recommend the use of resistor-type spark plugs and spark plug wire that are in good condition.

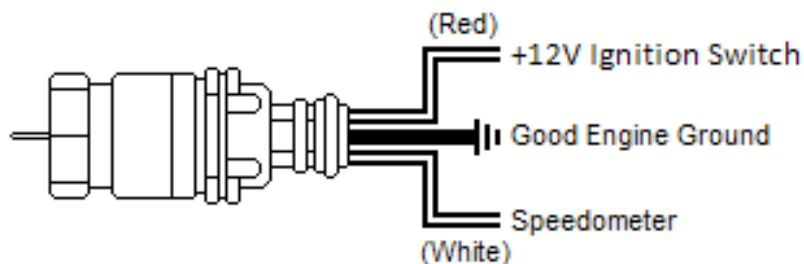

Troubleshooting

Ensure that all connections are solid and, using a multi-meter, confirm that the *Red* wire is receiving 12V across.