



Instructions for SUM-704000 LS Flywheel Spacer and Bolt Kit

Thank you for choosing the Summit Racing LS Flywheel Spacer and Bolt Kit. This kit will provide you with the optimal flywheel spacing when installing your early design (Non-LS) automatic transmission, such as a TH350, TH400, 700R4, 4L60, 4L60E (non-LS), 4L80E or 4L85E, on a GM Gen III/IV engine. The necessary mounting bolts are included.



*Will not fit 1999-2000 LQ4 6.0L applications

Parts Checklist

- (1) LS Flywheel Spacer
- (6) M11 x 1.50 x 25mm (UHL) bolts

Torque Specifications (3 Steps)

- Step 1:** 15 ft-lbs
- Step 2:** 37 ft-lbs
- Step 3:** 74 ft-lbs

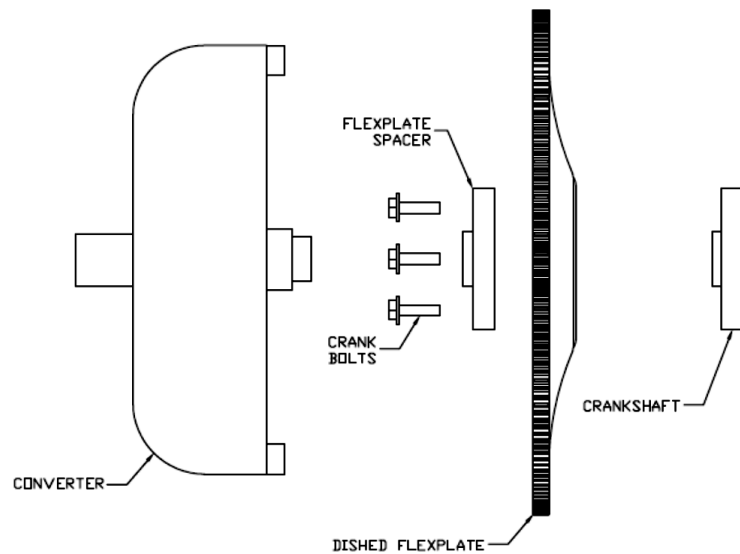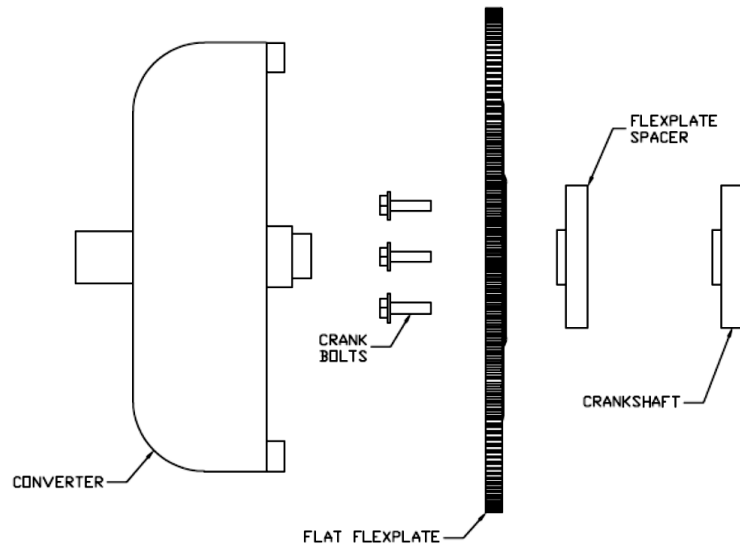

WARNING

Due to the multiple combinations of parts and their manufacturing tolerances, be sure to check all final measurements and clearances before final assembly to assure there is adequate transmission pump engagement or any crankshaft thrust issues.

Questions? Call our Tech Line. 1-330-630-0240