

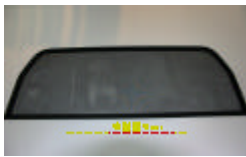


Wind Deflector Alfa Romeo Fastback Spider 1001

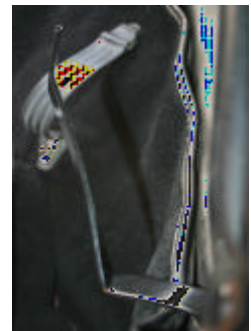

Fitting Kit

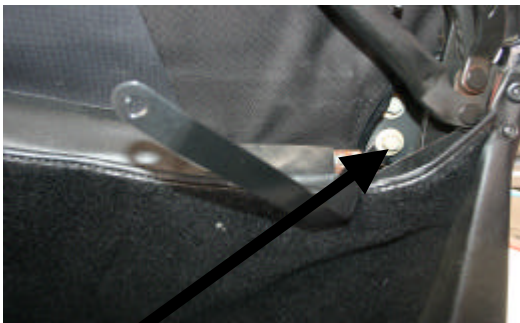

Fixingpoints for bracket
Softtop has to hold in a open position for fitting of bracket

Fitting point of bracket with the bolt of persenning



Put the wind deflector with the thread to both holes of brackets !



Technical changes possible
Check all nuts and bolts in terms when using the wind blocker for right torque !
Item can be different to the pictures

EBA –QS: Rev : 00 Weyer

Stand 13.11.2009
Freigabe Weyer QS/ QMB :
QS-MB03.03.2010